



Media Transport System Tutorial (MTT2D)

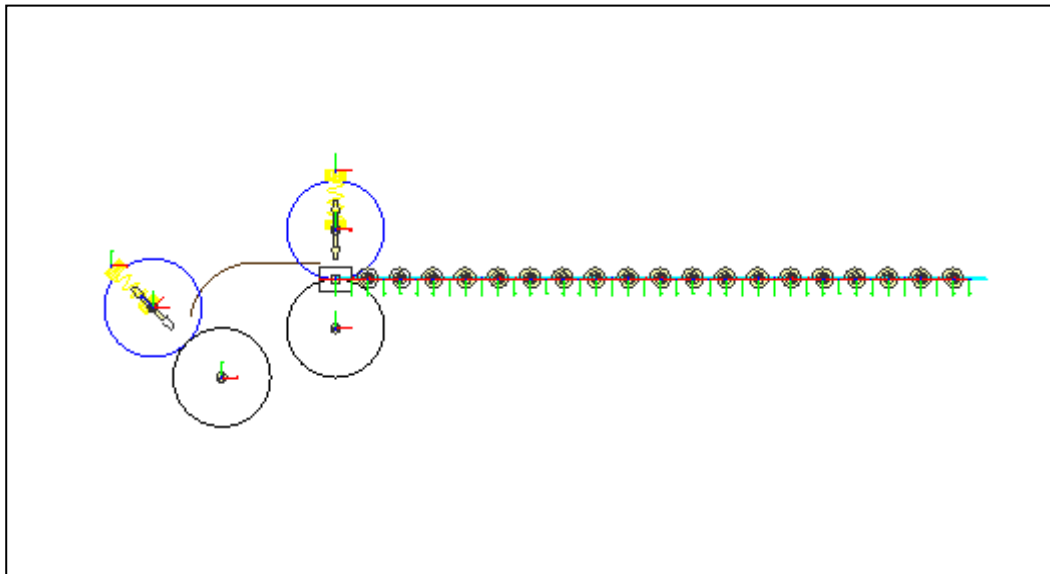



Table of Contents

Getting Started	3
Objective	3
Audience	3
Prerequisites	3
Procedures	4
Setting Up Your Simulation Environment.....	5
Task Objective	5
Starting RecurDyn	6
Creating a New Media Transport Subsystem	6
Setting Up the RecurDyn User Environment.....	6
Creating and Analyzing the Media Transport Model	7
Task Objective	7
Creating the Sheet.....	8
Creating Roller Pair 1	9
Creating Roller Pair 2	10
Creating Two Linear Guides	11
Creating an Arc Guide	12
Defining Roller Motion	12
Running the Dynamic Simulation.....	13
Plotting Results.....	14
Optional Exercise 1 – Adding Speed and Distance Sensors...	16
Task Objective	16
Setting Up the Model	17
Creating the Speed Sensor.....	17
Creating a Distance Sensor	17
Running the Dynamic Simulation.....	18
Plotting the Results.....	18
Optional Exercise 2 – Reverse Sheet Direction	20
Task Objective	20
Setting Up the Model	21
Creating an Event Sensor.....	21
Optional Exercise 3 – Checking the Sensitivity of Model	23
Task Objectives	23
Setting Up the Model	24
Modifying the Model.....	24

Getting Started

Objective

This tutorial acquaints you with the basic operation of the 2D Media Transport Toolkit (MTT2D). You will learn how to create and use a sheet group to represent the media (paper or film), fixed and moveable rollers to drive the media, and linear and arc guides to guide the motion of the media. In this tutorial, you will create the media transport model shown below:

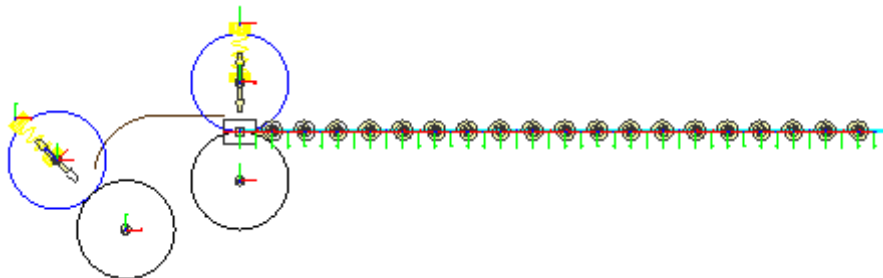

The tutorial consists of two chapters demonstrating the basics of the MTT2D, followed by three optional exercises. Each optional exercise is independent of the other optional exercises. You can choose to work with any of the optional exercises after creating the model as instructed in Chapters 2 and 3. You do not have to run the simulation or plot the results before moving on to the optional exercises.

Audience

This tutorial is intended for experienced users of RecurDyn. All new tasks are explained carefully.

Prerequisites

Users should first work through the 3D Crank-Slider, Engine with Propeller, and Pinball (2D contact) tutorials, or the equivalent. We assume that you have a basic knowledge of physics.

Procedures

The tutorial is comprised of the following procedures. The estimated time to complete each procedure is shown in the table.

Procedures	Time (minutes)
Simulation environment set up	5
Media transport model creation and analysis	30
Optional exercise 1	15
Optional exercise 2	15
Optional exercise 3	15
Total:	80



Estimated Time to Complete

This tutorial takes approximately 80 minutes to complete.

Setting Up Your Simulation Environment

In this chapter, you will create a new media transport subsystem and set up the simulation environment.

Task Objective

Learn how to create a new media transport subsystem.



Estimated Time to Complete

5 minutes

Starting RecurDyn

To start RecurDyn and create a new model:



1. On your Desktop, double-click the **RecurDyn** tool.
RecurDyn starts and the New Model window appears.
2. Enter the name of the new model as **mtt2d_example**.
3. Click **OK**.

Creating a New Media Transport Subsystem

All the tools to create and work with a MTT2D model are in the MTT2D toolkit under the Subsystem tab in the Toolkit bar.

To create a MTT2D model:



1. From the **Toolkit bar**, click **SubSystem**.
2. Click the **MTT2D** tool.

RecurDyn is now in subsystem edit mode.

Setting Up the RecurDyn User Environment

Now, set up the RecurDyn environment so it is easier to work with the MTT2D model.

To set up the RecurDyn environment:

1. Set the **grid size** to **5**. 



2. Set the **icon** and **marker** size to **5**.



3. Use the **Zoom** tool or type **z** and drag up or down until the grid of points just fits in the screen.

Creating and Analyzing the Media Transport Model

In this chapter, you will create the media transport model and investigate the loads on the:

- Mean sheet slip to moveable rollers
- Sheet segments

Task Objective

Learn to:

- Create the sheet
- Create the rollers and linear guides
- Define roller motion
- Run simulations and plot results



Estimated Time to Complete

30 minutes

Creating the Sheet

You will begin by creating the sheet.

To create the sheet:



1. From the **Toolkit bar**, click **MTT2D**, click the **Sheet** tool.
2. Select the creation method **Point, Point, Withdialog** (default) and click the two points shown below:
 - **Sheet Start Point: -10, 120, 0**
 - **Sheet End Point: 30, 120, 0**
3. Review the Sheet dialog box and make changes as needed (typically no changes are needed) to match the figure on the right and also listed below and click **OK**:

- **Sheet Start Point: -10.,120,0**
- **Sheet Direction Point: 30, 120, 0**
- **Sheet Segment Number: 20**
- **Segment Length: 10**
- **Sheet Thickness: 0.5**
- **Density: SH_D 2.2e-006**
- **Young's Modulus: SH_E 2250**
- **Sheet C: SH_C 32**
- **Sheet Curl Radius: SH_CR 0**

Folding Sheet, **Initial Velocity**, and **Hold Down the Noise of Sheet Contact Forces** are *not* selected.

The sheet appears in the graphics window as shown below.



4. Save the file to a working directory as **mtt2d_example.rdyn**.

Creating Roller Pair 1

Roller pair 1 consists of the following rollers, which you will create in the next steps:

- Fixed
- Movable

To create a fixed roller:



1. In the **Toolkit bar**, click **MTT2D** and click the **Fixed Roller** tool.
2. Select the creation method **Point, Radius** and click the two points shown below:
 - **Roller Center Point:** -10, 105, 0
 - **Roller Radius Point:** -10, 90, 0 (or enter **15** in the **Command Input** text box)

Your model looks like the following:




To create the movable roller:



1. In the **Toolkit bar**, click **MTT2D**, and click the **Movable Roller** tool.
2. Select the creation method **FixedRollerGroup, Direction, Radius** and click the **Fixed Roller Group** that you just created and the two points shown below:
 - **FixedRollerGroup :** FixedRollerGroup1
 - **Roller Direction Point :** -10, 130, 0
 - **Roller Radius Point :** -10, 120, 0 (or enter **15** in the **Command Input** text box)


The fixed roller and sheet appear in the modeling window as shown below.

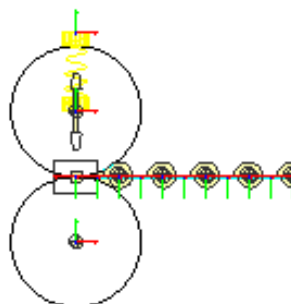

- If you would like to, you can look at the properties of the Movable Roller, which should match the dialog box shown on the right and listed below. (**Tip:** Right-click the **Moveable Roller Group** and click **Properties.**)

- **Base Body: MotherBody**
- **Roller Direction: 0, 1, 0**
- **Roller Radius: 15**
- **Roller Mass: 7.5e-004**
- **Roller Inertia (Izz): 1.3e-002**

Nip Spring, Match Center Marker Position with Graphic, and Update Geometry Information Automatically are all selected.

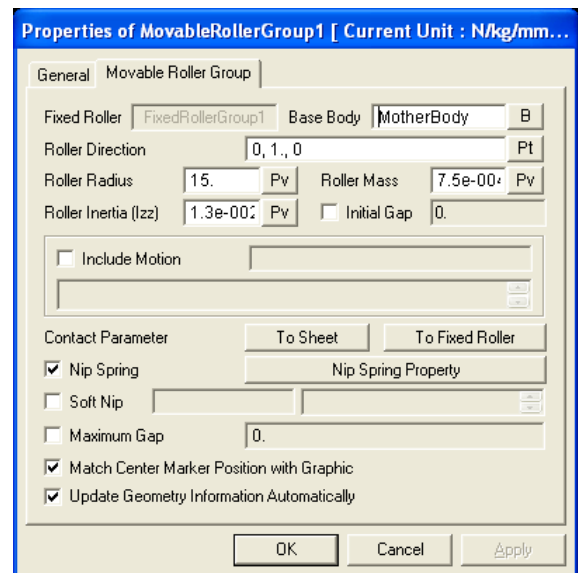

Creating Roller Pair 2

In this section, you will use the Roller Pair tool, which creates both a fixed and a moveable roller in a single operation.

To create the roller pair:




- In the **Toolkit bar**, click **MTT2D**, and click the **Roller Pair** tool.
- Select the creation method **Point, Radius, Direction, Radius** and click four points as shown below:
 - **Center Point : -45, 90, 0**
 - **Radius Point: -45, 75, 0** (or enter **15** in the **Command Input** text box)
 - **Direction Point: -70, 110, 0** (or enter directional vector of **-0.781, 0.625, 0** into the **Command Input** text box)

Tip: Use the coordinate readout at the bottom right area of the RecurDyn window (Global X:-70 Y:110 Z:0) to determine the cursor location.

- **Radius Point: -45, 75, 0** (or enter **15** in the **Command Input** text box)

The model now looks like the one shown on the right.

- Again, save the file to a working directory.

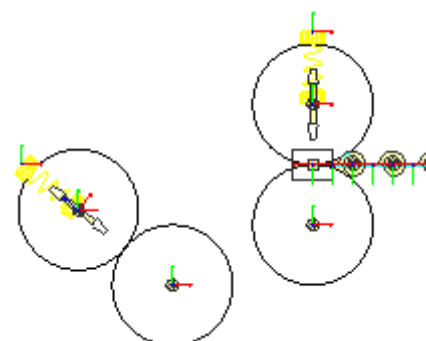

Creating Two Linear Guides

Now, you will create two linear guides: one defined from left to right and one from right to left.

To create the linear guides:

1. Before you begin, to get a better view of the model, fit it to the screen and zoom out approximately 10%.
2. From the **Toolkit bar**, click **MTT2D**, and click the **Linear Guide** tool
3. Select the creation method **Point, Point**, and click each pair of points as shown below. Note that each guide pushes against the sheet in one normal direction. The convention is that a horizontal guide that is defined from left to right pushes in the upward direction.



- **Linear guide 1:**

- **Start Point: -5, 110, 0**
- **End Point: 205, 110, 0**


Note: Guide defined from left to right; contacts sheet in the upward direction.

- **Linear guide 2:**

- **Start Point: -15, 125, 0**
- **End Point: -30, 125, 0**

Note: Guide defined from right to left; contacts sheet in downward direction.

The model appears as shown below.

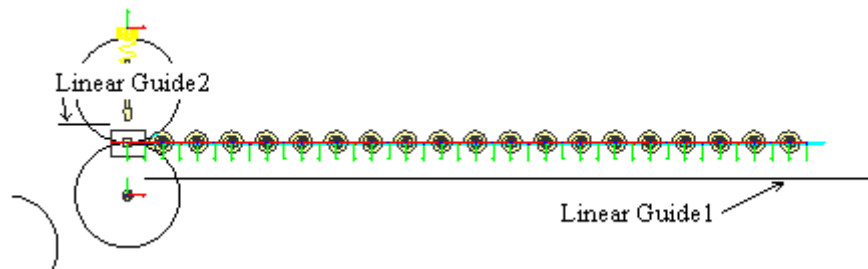

Creating an Arc Guide

To create an arc guide:




1. In the **Toolkit bar**, click **MTT2D**, and click the **Arc Guide** tool
2. Select the creation method **Point, Point, Direction, Angle**, and enter the points below:

- **Center Point:** -30, 95, 0
- **Radius Point:** -30, 125, 0
- **Direction Point:** -40, 125, 0 (or any point to the left of the radius point)
- **Angle Point:** -60, 105, 0 (or enter **70** into the **Command Input** text box)

Note: Arc guide defined in a counter-clockwise direction; contacts sheet towards the center of the arc.

Tip: Use the coordinate readout at the bottom right area of the RecurDyn window (Global X:-60 Y:105 Z:0) to determine the cursor location.

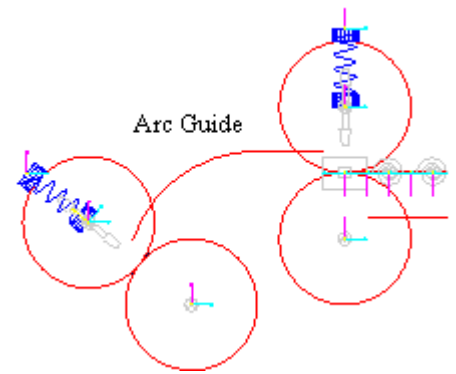

The model now appears as shown on the right.


3. Again, save the file to a working directory

Defining Roller Motion

In this section, you set the input motion of the two fixed rollers by adding a motion input to each fixed roller group. The motion will be applied to each revolute joint as shown in the figure on the right.

To define the roller motion:


1. Open the Properties dialog box for the first fixed roller group, **FixedRollerGroup1**.
2. Check the **Include Motion** option.
3. Click the **Include Motion** button.
4. Click **EL** to view the expression list.
5. Click **Create**.

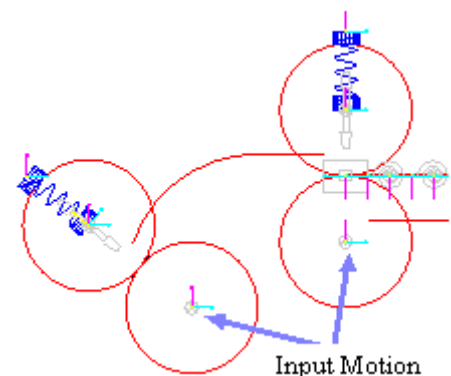


6. Type the motion expression into the Expression area as shown in the dialog box on the right:

2*TIME

7. Click **OK** on each of the three dialog boxes to complete the definition.
8. Repeat the process with the second fixed roller group, **FixedRollerGroup2**, except that you can simply reuse the same motion expression that you created in the earlier step by selecting the expression from the Expression List.

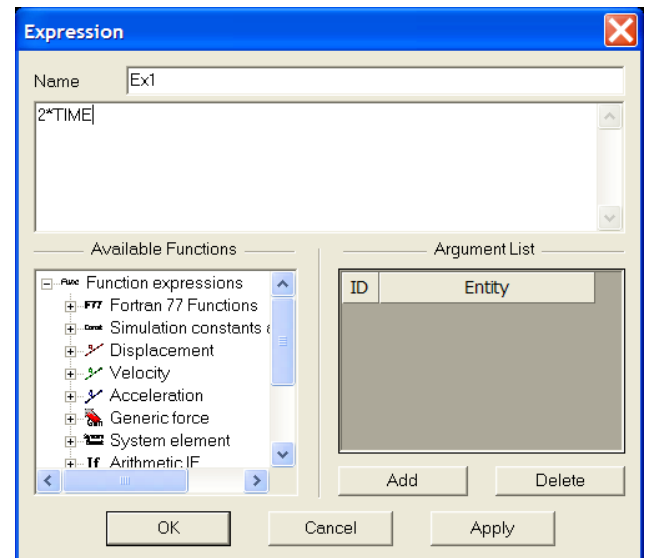

When you have completed these steps, the model appears as shown below.

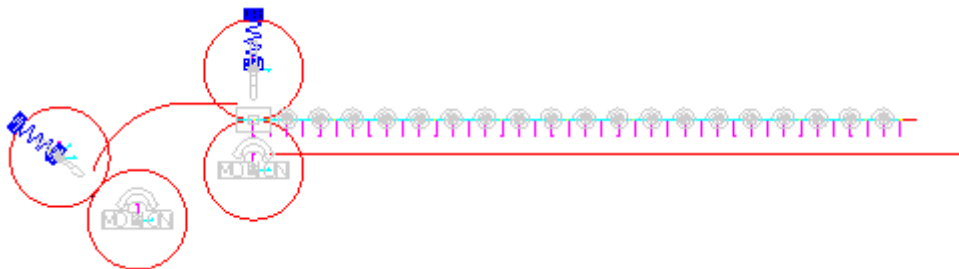

Running the Dynamic Simulation

To run the dynamic simulation:



1. On the top toolbar, click the **Dynamic/Kinematic** tool.
2. In the Dynamic Analysis dialog box, set the following:
 - **End time: 5**
 - **Number of steps: 100**
 - **Plot Multiplier Step Factor: 5**
 - Check **Hide RecurDyn during Simulation**.
3. Click **Simulate**.
4. Check the status of the simulation by placing the cursor over the RecurDyn icon in the task bar at the bottom of the screen.

The simulation completes in less than a minute.


5. Press the play button on the animation controls in the toolbar to play the animation.

Plotting Results


To plot the output data:



1. Click the **Plotting** tool, two icons to the right of the **Dynamic/Kinematic** tool.
2. In the Database window on the right, expand **Movable Roller**→**MovableRollerGroup1** and **MovableRollerGroup2**.
3. Double-click **MeanSlip_SHT** in each section and adjust the labels and axes to obtain the plot below. You can see large amount of registered slip when the leading edge of the sheet stubs up against the movable roller of the second roller pair.

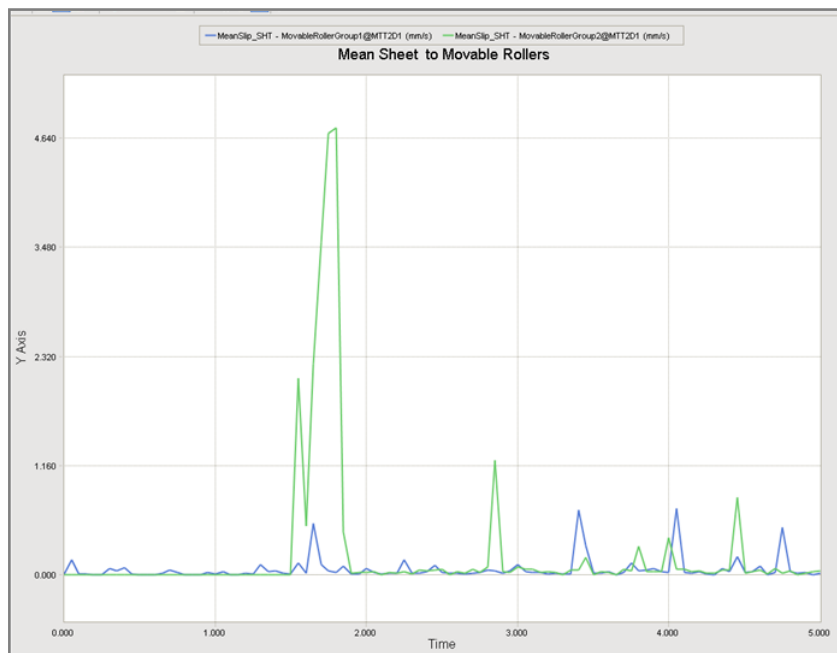

4. Click the **Add Page** tool to create a new plot page.
5. In the Database window, expand **SheetBody**→**SheetBody1**.
6. Double-click **Fx_Tangential** and **Fy_Normal**.
7. Expand **SheetBody2** and double-click **Fy_Normal**.
8. Adjust the labels and axes to obtain the plot shown next.

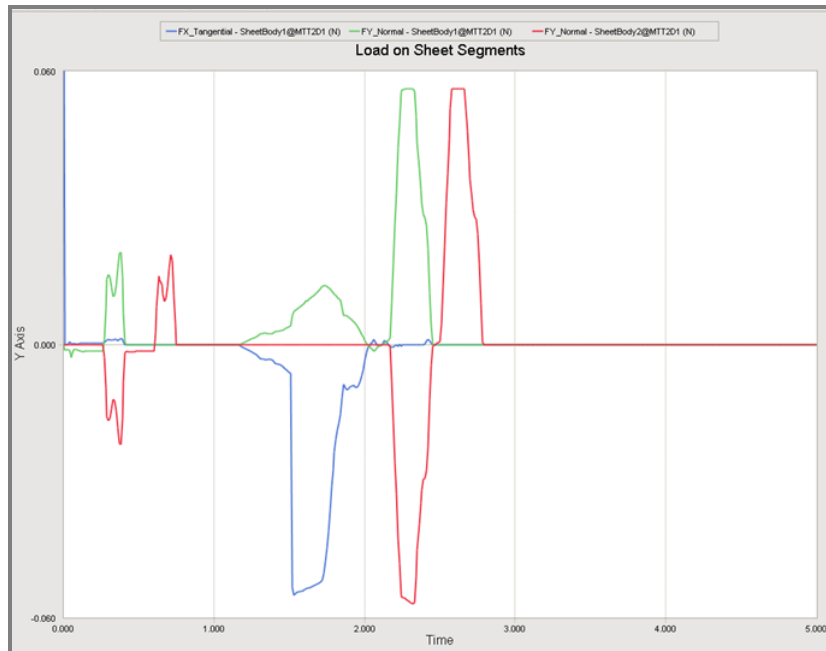

9. Close the plot window.

RecurDyn returns to the modeling window.

10. Save your RecurDyn model file.

You can stop with this tutorial now or you can work through the following optional exercises. Each optional exercise is independent of the other optional exercises.

Optional Exercise 1 – Adding Speed and Distance Sensors

Task Objective

In this exercise, you will define two sensors:

- Speed sensor to measure the velocity of the sheet in the x direction
- Distance sensor to measure the closest distance between the sheet and a certain point on the arc guide

You will then run a simulation and plot the sensor results.



Estimated Time to Complete

This tutorial takes approximately 15 minutes to complete.

Setting Up the Model

You will open the model you created in the previous exercise and save it as a new name.

To set up the model:

1. Open the file **mtt2d_example.rdyn** that you created by performing the major steps in the first two chapters of this tutorial.
2. From the **File** menu, choose **Save As** and save a new model file as **mtt2d_example_sens.rdyn**.

Creating the Speed Sensor

Next, you will use a speed sensor to measure the velocity of the sheet in the x direction.

To create the speed sensor:



1. From the **Toolkit bar**, click **Sensor**, and click the **Speed Sensor** tool.
2. Select the input method **Point, Direction, Distance**, and enter the following:
 - **Center Point:** **-25, 120, 0**
 - **Direction Point (+X):** **-20, 120, 0** (or enter **1,0,0** in the **Command Input** text box)
 - **Distance Point:** **-40, 120, 0** (or enter **15** in the **Command Input** text box)

Creating a Distance Sensor


You will use a distance sensor to measure the closest distance between the sheet and a selected point on the arc guide.

To create a distance sensor:



1. In the **Toolkit bar**, click **Sensor**, and click the **Distance Sensor** tool.
2. Select the creation method **Point, Direction, Distance**, and enter the following:
 - **Center Point:** **-51.2, 116.2, 0** (along arc, 45 degrees from vertical)
 - **Direction Point:** Enter **1, -1, 0** in the **Command Input** text box to define a direction of -45 degrees, which is normal to the arc at the center of the distance sensor.
 - **Distance Point:** Enter **15** in the **Command Input** text box.

When you have complete these steps the model should appear as shown below:

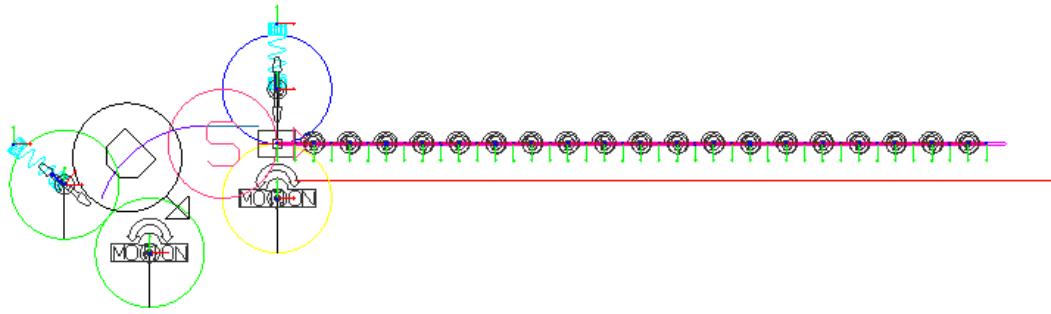

Running the Dynamic Simulation

To run the dynamic simulation:



1. Click the **Dynamic/Kinematic** tool.
2. Set the following:
 - **End time: 5**
 - **Number of Steps: 100**
 - **Plot Multiplier Step Factor: 5**
 - Check **Hide RecurDyn during Simulation**
3. Click **Simulate**.
4. Check the status of the simulation by placing the cursor over the RecurDyn icon in the task bar at the bottom of the screen.

The simulation completes in less than a minute.

5. Press the play button on the animation controls to play the animation and verify that the addition of the sensors did not affect the behavior of the model.

Plotting the Results

To plot the sensor output data:




1. Click the **Plotting** tool.
2. In the Database window on the right, expand **Sensor**→**SpeedSensor1**.
3. Double-click **Value** to draw the curve of sheet velocity.

Note that the sheet comes to a halt and reverses slightly between 1.5 and 1.85 seconds. A review of the animation shows that interaction between the leading edge of the sheet and the second movable roller causes this behavior.



4. Click the **Add Page** tool to create a new plot page.

5. In the Database window, expand **DistanceSensor1**.
6. Double-click **Value** to draw the distance curve.
7. Adjust the labels and axes to obtain the plot shown below.

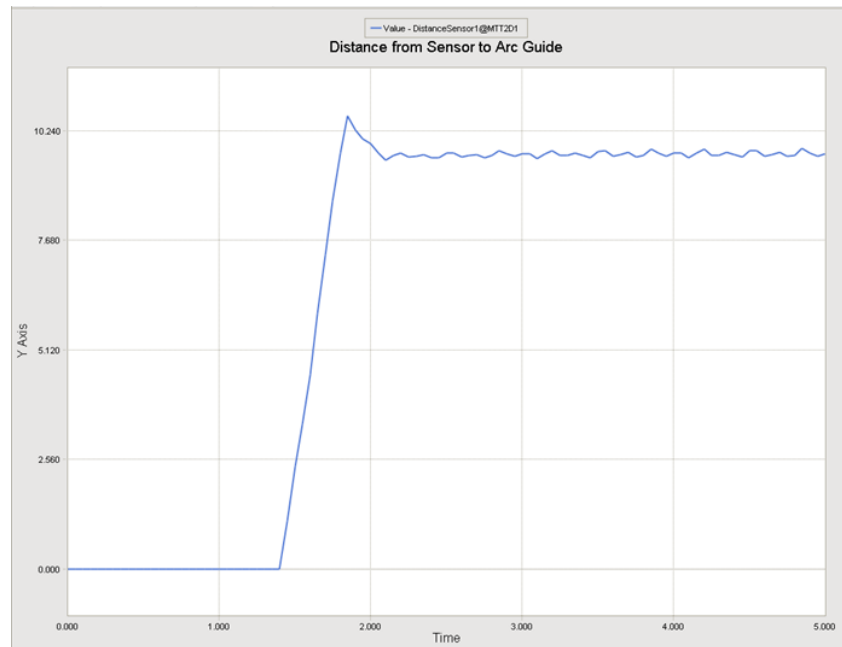

Note that the distance of the sheet from the arc guide is greatly influenced by its entry into the second roller pair.

8. Close the plot window.
9. Save your RecurDyn model file.

Optional Exercise 2 – Reverse Sheet Direction

Task Objective

In this exercise, you will use an event sensor to measure when the sheet has entered into the second roller pair. The roller motion will be reversed 0.5 seconds after the sensor detects the sheet entrance.



Estimated Time to Complete

This tutorial takes approximately 15 minutes to complete.

Setting Up the Model

To set up the model:

1. Open the file **mtt2d_example.rdyn** that resulted from performing the steps in the main section of the tutorial.
2. From the **File** menu, choose **Save As** and to save the new model file as **mtt2d_example_rev.rdyn**.
3. Click the right mouse button over the subsystem **MTT2D1** and select the **Edit** option to enter the subsystem mode for this subsystem that you created in the first section of the tutorial.

Creating an Event Sensor

In this section, you will create an event sensor. An event sensor provides two pieces of information:

- The SNSR function expression has a value of 0 before the event occurs and a value of 1 after the event occurs.
- The EVTIME function expression holds the simulation time when the event occurs.

You will use the STEP function to blend in the change of roller velocity at 0.5 seconds after the event occurs. You will modify the Input Motion Expression of the two fixed rollers to use the information from the event sensor.

To create an event sensor:




1. In the **Toolkit bar**, click **Sensor**, and click the **Event Sensor** tool.
2. Select the creation method **Point, Distance**, and enter the following:
 - **Center Point:** Enter **-57, 100, 0** in the **Command Input** text box
 - **Distance:** Enter **5** in the **Command Input** text box
3. In the Database window, right-click the expression **Ex1**, and click **Property**.

- Click on the **E** button on the row with expression **Ex1** in the Expression list and modify the motion expression as follows:

$2 * \text{TIME} - \text{SNSR}(1) * \text{STEP}(\text{TIME}, \text{EVTIME}(1) + 0.5, 0, \text{EVTIME}(1) + 0.6, 2) * 2 * (\text{TIME} - \text{EVTIME}(1) - 0.5)$

- Click **Add** in the lower right corner of the Expression dialog box to add a text box to the Argument List.
- From the Database window, drag the **EventSensor1** item in the Sensors group to the text box just created in the Argument List.

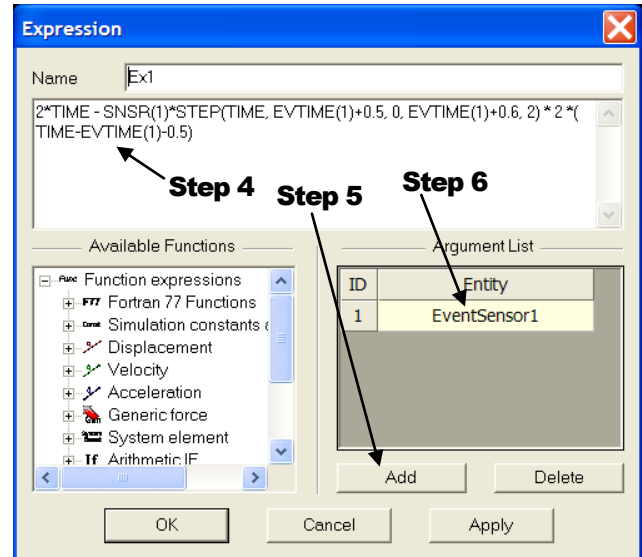

- Click the **Dynamic/Kinematic** tool and following the procedure given in the basic tutorial for running a simulation on page 13.
- Press the play button on the animation controls to play the animation and you will see the reversal of the roller motion 0.5 seconds after the sheet passes through the second roller pair.
- Save your RecurDyn model file.

Optional Exercise 3 – Checking the Sensitivity of Model

Task Objectives

In this exercise, you will modify the model you created in the main section of the tutorial to see its sensitivity.



Estimated Time to Complete

This tutorial takes approximately 15 minutes to complete.

Setting Up the Model

To set up the model:

1. Open the file **mtt2d_example.rdyn** that resulted from performing the steps in the main section of the tutorial.
2. From the **File** menu, choose **Save As** to save a new model file as **mtt2d_example_delta.rdyn**.

Modifying the Model

To modify the model:

- Make the following modifications and run a simulation after each modification. Notice the effect that each change has on the behavior of the model.
 - Double the velocity of the fixed rollers, and run the simulation for 2.5 seconds.
 - Change the sheet thickness to 0.2 mm, and run the simulation for 2.5 seconds.
 - Change the sheet thickness to 0.1 mm, and run the simulation for 2.5 seconds.
 - Is the simulation time getting shorter or longer? Why?
 - Do you notice any contact problems? Why are they happening?
 - Increase the contact damping on the arc guide by 10 times (.012 to .12).

Thanks for participating in this tutorial!

Copyright © 2009 FunctionBay, Inc. All rights reserved

User and training documentation from FunctionBay, Inc. is subjected to the copyright laws of the Republic of Korea and other countries and is provided under a license agreement that restricts copying, disclosure, and use of such documentation. FunctionBay, Inc. hereby grants to the licensed user the right to make copies in printed form of this documentation if provided on software media, but only for internal/personal use and in accordance with the license agreement under which the applicable software is licensed. Any copy made shall include the FunctionBay, Inc. copyright notice and any other proprietary notice provided by FunctionBay, Inc. This documentation may not be disclosed, transferred, modified, or reduced to any form, including electronic media, or transmitted or made publicly available by any means without the prior written consent of FunctionBay, Inc. and no authorization is granted to make copies for such purpose.

Information described herein is furnished for general information only, is subjected to change without notice, and should not be construed as a warranty or commitment by FunctionBay, Inc. FunctionBay, Inc. assumes no responsibility or liability for any errors or inaccuracies that may appear in this document.

The software described in this document is provided under written license agreement, contains valuable trade secrets and proprietary information, and is protected by the copyright laws of the Republic of Korea and other countries. UNAUTHORIZED USE OF SOFTWARE OR ITS DOCUMENTATION CAN RESULT IN CIVIL DAMAGES AND CRIMINAL PROSECUTION.

Registered Trademarks of FunctionBay, Inc. or Subsidiary

RecurDyn is a registered trademark of FunctionBay, Inc.

RecurDyn/Professional, RecurDyn/Modeler, RecurDyn/Solver, RecurDyn/ProcessNet, RecurDyn/AutoDesign, RecurDyn/CoLink, RecurDyn/FFlex, RecurDyn/RFlex, RecurDyn/Linear, RecurDyn/CATIA Read & Write, RecurDyn/EHD, RecurDyn/ECFD_EHD, RecurDyn/Control, RecurDyn/Hydraulic, RecurDyn/MeshInterface, RecurDyn/Bearing, RecurDyn/Driver, RecurDyn/Spring, RecurDyn/Tire, RecurDyn/Belt, RecurDyn/Chain, RecurDyn/Crank, RecurDyn/Engine, RecurDyn/Gear, RecurDyn/HAT, RecurDyn/MTT2D, RecurDyn/MTT3D, RecurDyn/Piston, RecurDyn/Track_HM, RecurDyn/Track_LM, RecurDyn/TimingChain, RecurDyn/Valve are trademarks of FunctionBay, Inc.

Third-Party Trademarks

Windows and Windows NT are registered trademarks of Microsoft Corporation.

ProENGINEER and ProMECHANICA are registered trademarks of PTC Corp. Unigraphics and I-DEAS are registered trademark of UGS Corp. SolidWorks is a registered trademark of SolidWorks Corp. AutoCAD is a registered trademark of Autodesk, Inc.

CADAM and CATIA are registered trademark of Dassault Systems. FLEX//m is a registered trademark of GLOBEtrrotter Software, Inc. All other brand or product names are trademarks or registered trademarks of their respective holders.

Edition Note

These documents describe the training information of *RecurDyn* V7R3.